

**MODULAR RADIANT
HEATING PANEL SYSTEM**

**INSTALLING CARPET OVER
THERMALBOARD**


INSTALLATION GUIDE UNDER CARPET

Thermalboard™ shall be installed over a wooden subfloor, in compliance with *General Thermalboard Installation Requirements For All Flooring Over Wood Subfloor*.

In addition, the following specific cautions and instructions shall be followed: Carpet and pad may both be installed over Thermalboard™. When installing the pad, take care to avoid puncturing

the tubing. We advise adding thin underlayment plywood over Thermalboard™ prior to carpet and pad installation to protect the tubing from point loads.

As with all radiant heating installations, a thin slab foam rubber pad and short, high density carpet should be used. If the carpet pad is glued, a high temperature latex adhesive must be applied.

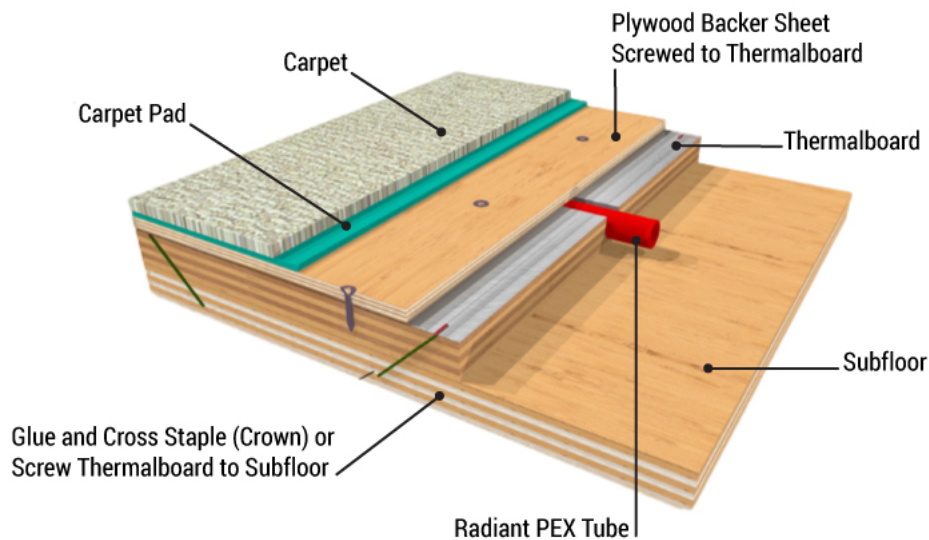

NOTE

Glue to the underlayment plywood: Do not glue to Thermalboard™ or to tubing! Maintain 2" minimum tubing clearance from carpet tack strips.